

User Manual

1. Installation and size.....	1
2.Front Panel.....	2
3.Diagram.....	3
4.Operation.....	4
5. Screen Description.....	5
5.1 Screen Description.....	5
5.2 Parameters Menu Description.....	7
6.Parameters List Description.....	9
6.1 System Parameter.....	9
6.2 Input Parameter.....	10
6.3 Frequency Parameter.....	11
6.4Math Parameter.....	12
6.5FLOWParameter.....	12
6.6 LINE MATH Parameter.....	14
6.7 CHANNEL SET Parameter.....	14
6.8 ALARM Parameter.....	15
6.9REPORT Parameter.....	16
6.10RETRANSMI Parameter.....	16
7. Flow Totalizer.....	17
7.1. Flow Totalizer and Heat Totalizer Parameter Setting and Configuration.....	17
7.2. FlowTotalizeCalculating Math Mode.....	18
7.3. “Tol.Coeff” Parameter - Totalize Coefficient Setting.....	18
7.4. “CompMode”–Compensation Mode Setting.....	18
7.5 Quantitative Output of Flow Totalize Function.....	19
8. Example for Parameters Configuration Setting.....	20
8.1 Example of Flow TotalizeConfiguration Setting.....	20
8.2 Example of Math ConfigurationSetting.....	27
8.3 Example of LINE MATH Configuration Setting.....	27
9.PC Software for Memorized Data.....	28
9.1 Notes for USB Pen Drive.....	28
9.2 Data Transfer and Data Download.....	28
9 . 3 P C S o f t w a r e M D C S 3 . 0 . 6	
Operation.....	28
10.Order	
Code.....	32

WARRANTY CARD

